

NETMASTER NETWORK MANAGER

FOR COMMERCIAL SOLUTIONS

TP-NM-C-D FEATURES

- Network management of time scheduling, water treatment routines, mapping, alarming & trending
- Native BACnet MS/TP, Modbus RTU, BACnet/ IP and MQTT communications
- Embedded web server for setup
- Embedded email support for alarming and reports

Designed from the ground up using open BACnet, Modbus, IP and MQTT communications for both building and cloud communications, the TP-NM-C-D NetMaster provides a full feature set for powerful network management.

Combining the TP-NM-C-D with Titan FCU controllers, networkable sensors, smart IO and user interfaces provides a comprehensive and complete commercial control and monitoring solution.


SPECIFICATION

Power Supply	24V AC/DC +/-10%
Power Consumption	0.5A @ 24VAC/DC
Connections	2 x RJ45 10/100 Mbps shielded Fast-Ethernet Port 2 x serial port EIA-485 BACnet MS/TP / Modbus RTU 1 x USB (OTG) used for production programing
LED Indication	RS485 Tx/Rx Power LED
Network Bias Resistors	560 Ohms (DIP Switch)
Termination Resistor	120 Ohms (DIP Switch)
Operating Temperature	5 – 50°C
Operating Humidity	20 – 80% RH Non-condensing
Operating System	Linux
IP Rating	IP20
Enclosure Plastic Rating	UL94-VO
Mounting	DIN Rail
Dimensions	159 (w) x 90 (h) x 58 (d) mm
Country of Origin	UK
Product Code	TP-NM-C-D





CONNECTIONS

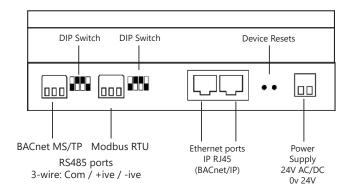

DIP SWITCH SETTINGS

Each RS485 port has a dedicated 4-way DIP switch that is used to terminate and bias the network.



To Terminate the MSTP network with 120R resistor, switches 2&3 should be on (down)



To apply Bias to the MSTP network, switches 1&4 should be on (down)

MOUNTING & INSTALL

The NetMaster product must installed by a competent and suitably qualified person in a location/enclosure suitable to provide protection to the device and network from unauthorized access/tampering that could lead to reduced network security.








- 1. Fix top clips over DIN rail
- 2. Pull down bottom clips using screwdriver
- 3. Close controller towards DIN rail
- 4. Push up bottom clip to fix securly to DIN rail

Must be mounted horizontally

Removing from DIN rail

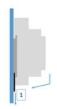



- 1. Pull down bottom clip with screwdriver
- 2. Lift controller away from DIN

COMMISSIONING

The setup screens are accessed through a web browser once the TP-NM-C-D is connected to the same local IP network. Enter the IP address (192.168.1.151 default) into the URL address bar within a web browser and when prompted enter the user name and password:

Default user name: admin Default password: admin

At first login, you will be prompted to change the password. This is mandatory.

Full commissioning details can be found in the manual - contact Titan Products for this.

For further install and setup information please contact technical@titanproducts.com

